

figure 1

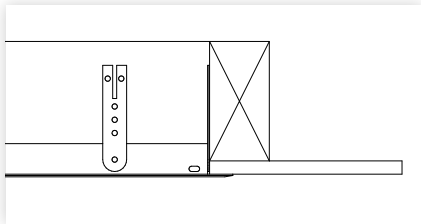


figure 2

CH600600

Installation Instructions

1. Trim the opening in your ceiling to 600mm x 600mm using minimum 90mm x 45mm framing timber. Refer figure 1. Ensure opening is square.
2. For ease of installation, remove the lid from the ceiling hatch frame by removing the spring bar.
3. Turn all the fixing tabs to the vertical position and insert the ceiling hatch into the opening, giving consideration to which direction you would like the ceiling hatch to open.
4. Fit the hatch frame into the opening, ensuring the flange sits tight to the ceiling. Fix all tabs to the framing timber. See figure 2.
5. Replace the lid and check that it closes securely on the spring latches. Adjust if necessary.